

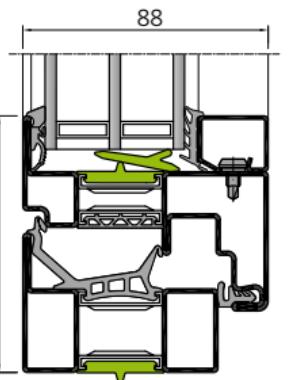


Fenstervarianten
Variantes des fenêtres
Windows variants

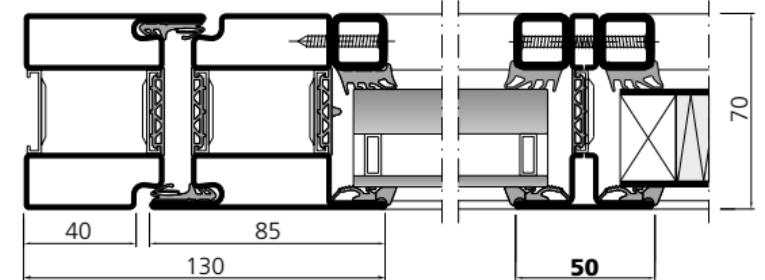

Fenster Hi (hochwärmegedämmt)
Fenêtre Hi (haute isolation thermique)
Window Hi (high thermal insulation)

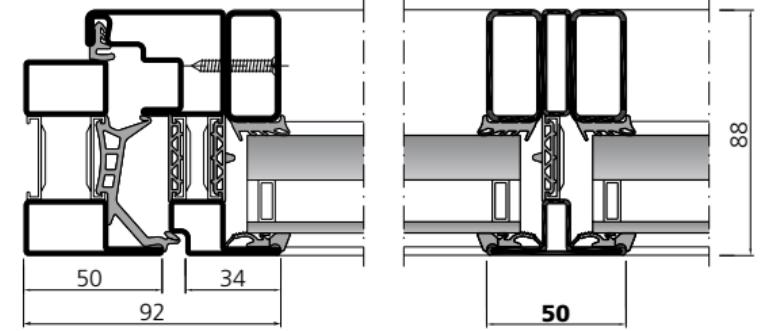

Fenster und Tür einbruchhemmend RC3
Fenêtre et porte anti-effraction CR3
Burglary-resistant window and door RC3